


Celetron power supply installation instruction

66604 (4)
66602 (4)
67287 (4)

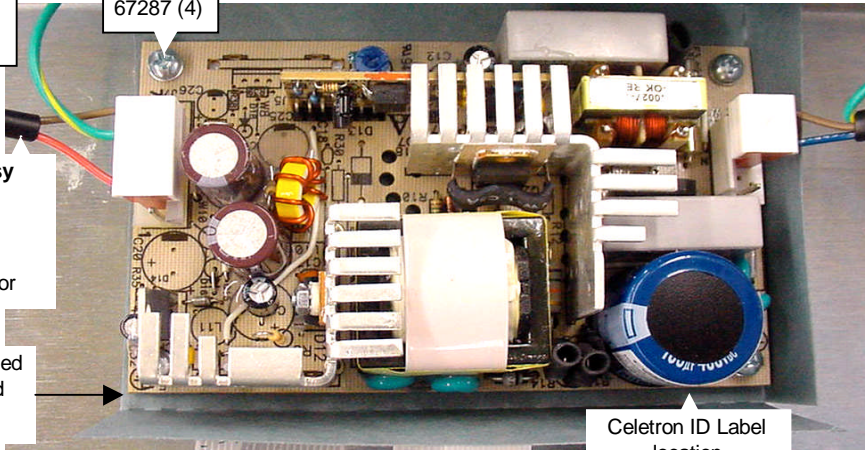

72138-1 DC Harness Assy
Brown wire at top
Grn/Yel wire in middle
Red wire at bottom
Unused pin below connector

Blue insulator (71847) installed behind power supply board

Celetron ID Label location

72141-1 AC Harness Assy
Brown wire at top
Blue wire at bottom
Unused pin below connector




Celetron ID Label

ATTENTION:
THE POWER SUPPLY BEING INSTALLED MAY BE WIRED DIFFERENTLY THAN THE POWER SUPPLY BEING REPLACED.

Identify the power supplies and be sure to match wire colors of the AC and DC Harness Assemblies. If different, simply rotate the connector 180 degrees.

Amperor power supply installation instruction

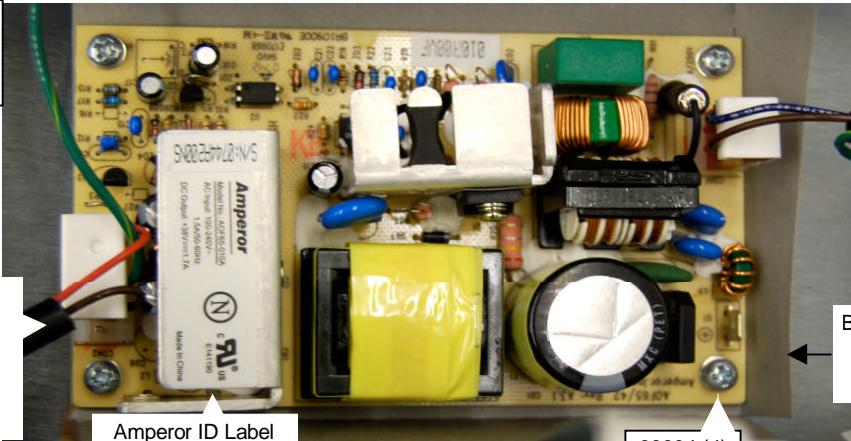

72138-1 DC Harness Assy
Red wire at top
Grn/Yel wire in middle
Brown wire at bottom
Unused pin below connector

Amperor ID Label location

66604 (4)
66602 (4)
67287 (4)

72141-1 AC Harness Assy
Blue wire at top
Brown wire at bottom
No unused pin

Blue insulator (71847) installed behind power supply board

Hardware

66601	#6 Flat washer	4
66602	#6 Split lockwasher	4
66604	6-32 x 1/4" PHMS	4

	Revisions	Date	By	Checked
	Released for Production			

CRADEN PERIPHERALS CORPORATION

DP8 & DP9 Power Supply Installation

Name:				
Material:				
Finish:	Scale:			
No. Req'd:				
Drawn by:	Drawing No.			Rev.
Date:	72137-1			
Checked:				
Date:				